


XPERT Pro QUICK START

Go to: www.XPOLE.com for full instruction manual |   

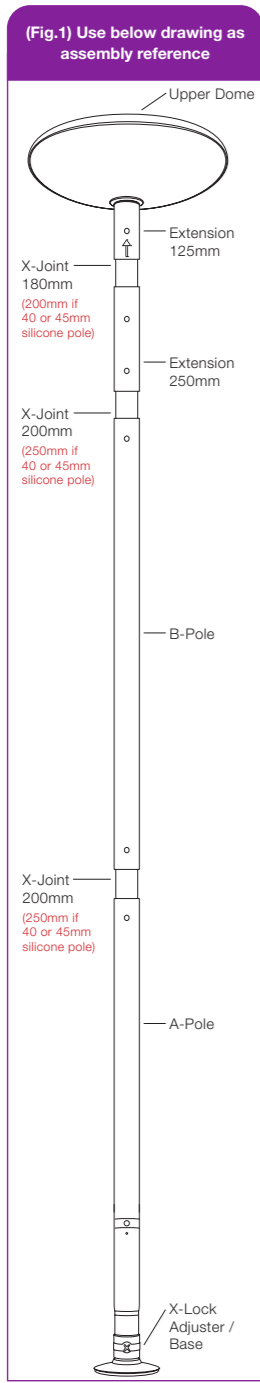

1 Box Contents.

(40 & 45mm) Pole set

- A-Pole (with X-Lock)
- B-Pole
- Extension 250mm (10")
- Extension 125mm (5")
- X-Joint 200mm (8")
- Top Insert
- X-Joint 200mm (8")
- X-Joint 180mm (7")

X-Joints supplied in 40mm Pole Sets & 45mm Silicone Pole sets

- X-Joint 250mm (10")
- X-Joint 250mm (10")
- X-Joint 200mm (8")

6mm/5mm Hex Key, Instruction Manual, Upper Dome

What you need before you start:
1x Tape Measure & 1 x Spirit Level

2 Measure the ceiling height at the point of use.

Labels: Ceiling, Tape Measure, Floor

3 Select the extension(s) required to suit the measured height.

| | | | |
|---|---|--|--|
| 2260 - 2385mm 88.9" - 93.8" 7' 4" - 7' 9" | 2385 - 2505mm 93.8" - 98.6" 7' 9" - 8' 2" | 2505 - 2630mm 98.6" - 103.5" 8' 2" - 8' 7" | 2630 - 2755mm 103.5" - 108.4" 8' 7" - 9' |
|---|---|--|--|

Standard set heights 2260 - 2755mm (88.9" - 108.4")

Sizes achievable using the 125mm & 250mm extensions

All measurements include an allowance to enable you to assemble your pole as per the instruction manual

4 X-pole Must be installed under a rigid ceiling point as shown below.

Labels: Solid Ceiling, Single Joist, Steel Beam, Upper Dome, B-Pole, A-Pole

5 It is VERY IMPORTANT to tighten hex screws progressively ALTERNATING between each one.

Labels: B-Pole, X-Joint, A-Pole, 6mm Hex Key, Turn clockwise to tighten

6 Install top insert & upper dome.

Labels: Upper Dome, Top Insert, B-Pole

7 Get to know your X-pole adjustable parts.

8 To lock your X-LOCK and place it in to static mode, lift the X-LOCK collar and turn it clockwise.

Labels: Static Locked, Lift X-LOCK collar

9 Undo 3x adjuster lock hex screws a minimum of 3 complete turns.

Labels: 3 x Adjuster Locking Hex Screws, Anti / Counter Clockwise to Loosen, 5mm Hex Key, Adjuster Cover

10 Lift the pole into position under joist or selected point.

Labels: Joist, Ceiling

11 Turn A-pole anti/counter clockwise to extend to required height.

Labels: Anti / Counter Clockwise, Tighten / Expand, X-Lock

12 DO NOT! extend adjuster beyond the red 'O' ring. Add extension if 'O' ring is exposed.

Labels: Adjuster Cover, Adjuster Cover Keyhole, Red 'O' Ring, Vertical Locking Guide Line

13 Check pole is vertical, if not, loosen slightly then redo step 11.

Labels: Spirit level (not included)

14 Tighten firmly, It is MANDATORY that the red line is visible through the keyhole.

Labels: 3 x Adjuster Locking Hex Screws, Adjuster Cover, Adjuster Cover Keyhole, Vertical Line, Adjuster Body

15 Tighten 3x locking hex screws.

Labels: 3 x Adjuster Locking Hex Screws, Clockwise to Tighten, 5mm Hex Key, Adjuster Cover, Check Red-line

16 Check sturdiness of pole with feet on & off the floor ensuring no movement.

17 To use pole on spin, lift X-LOCK collar and turn counter clockwise. Clockwise for locked.

Labels: Spinning Unlock, Static Locked, Lift X-LOCK collar

READ - IMPORTANT WARNING: Installation & Use of the Xpert Pro Dance Pole is at the users discretion and it the users responsibility to check and the pole is installed correctly and safely before use. Safety is a priority at all times.