

**X-POLE**<sup>®</sup>

www.XPOLE.com |    

# Pole Warmer

## Instruction Manual

**IMPORTANT**  
**READ INSTRUCTIONS**  
**RETAIN FOR FUTURE USE**

Item No: X-PW01-UK  
X-PW01-EUR

## **CRITICAL INFORMATION** **PLEASE READ THIS BEFORE USE**

- **Only to be used for warming dance poles. DO NOT use for any other purpose.**
  - **Do not use this pole warmer on silicone, rubber or powder coated poles.**
  - **The pole warmer must be completely spread out at all times during use to avoid overheating.**
  - **The 'Hook & Loop' tape down the edges of the pole warmer must be fastened securely.**
  - **Lengthy usage of the pole warmer at the high setting could result in skin irritation or burns.**
  - **Switch off at the power outlet and remove the plug when this warmer is not in actual use.**
  - **Be sure that the pole warmer is used only on an AC supply circuit of the correct voltage.**
- 1. This appliance must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.**
  - 2. Children under the age of 3 must not use this appliance due to their inability to react to overheating.**
  - 3. The appliance is not to be used by children over the age of 3 without parental supervision unless the controls have been pre-set by a parent or guardian, or unless the child has been adequately instructed on how to operate the controls safely.**
  - 4. This appliance can be used by children aged from 8 years and above, or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given adult supervision or instruction concerning use of this appliance in a safe way and understand the hazards involved.**
  - 5. Children shall not play with the appliance.**
  - 6. Cleaning and/or user maintenance shall not be carried out by children without supervision.**
  - 7. When not in use, store as follows: Fold neatly but not tightly (or rolled) and without sharp bends in the heating element and place into the bag provided.**
  - 8. When storing the appliance, allow it to cool down before folding.**
  - 9. Do not crease the appliance by placing items on top of it during storage.**
  - 10. Examine the appliance frequently for signs of wear or damage. If there are such signs, if the appliance has been misused or does not work, do not switch on again and return it to the supplier.**
  - 11. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**
  - 12. This appliance is not intended for medical use in hospitals.**
  - 13. Do not switch on or use if the warmer pad is moist or wet.**
  - 14. Do not switch on the appliance if the warmer pad is folded or creased.**
  - 15. Do not insert pins or sharp objects into the warmer pad.**
  - 16. The switch or control unit must not be allowed to get wet during washing and during drying the cord must be positioned to ensure that water does not flow into the switch or controller.**
  - 17. Important instructions – retain for future use.**

Warnings



HANDS WASH ONLY



DRY FLAT OPEN



DO NOT IRON



DO NOT MACHINE WASH



DO NOT FOLD



NOT SUITABLE FOR CHILDREN UNDER 3



DO NOT INSERT PINS



DO NOT TUMBLE DRY



DO NOT DRY CLEAN



DO NOT DISPOSE WITH HOUSEHOLD WASTE



DO NOT BLEACH



CONFORMS TO EU SAFETY REGULATIONS




**Warning**

The WEEE marking on this product (see left) or its documentation indicates that the product must not be disposed of together with household waste. To prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or local authority responsible for waste disposal in your area.


## Quick Start Guide

 Fig.1

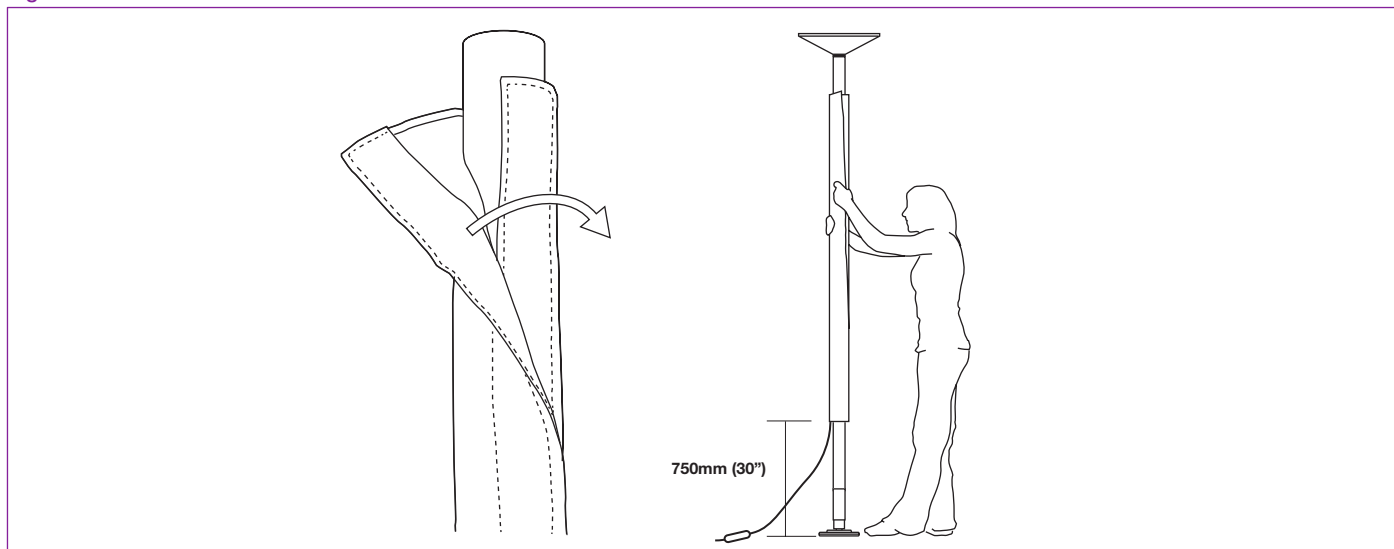

After removing the X-Pole warmer from its packaging familiarize yourself with the Operation & Controls instructions on page 3. Wrap the warmer pad tightly around the X-Pole starting with the bottom of the pad where the power cord exits, approximately 750mm (30") from the floor. Secure using the 'Hook & Loop' tape down the edges of the warmer pad. Once securely attached, plug the pole warmer into the power supply. Use an extension lead if needed to ensure that the main power core is not stretched. A stretched lead/cord will pull the warmer pad down the pole.

 Fig. 2

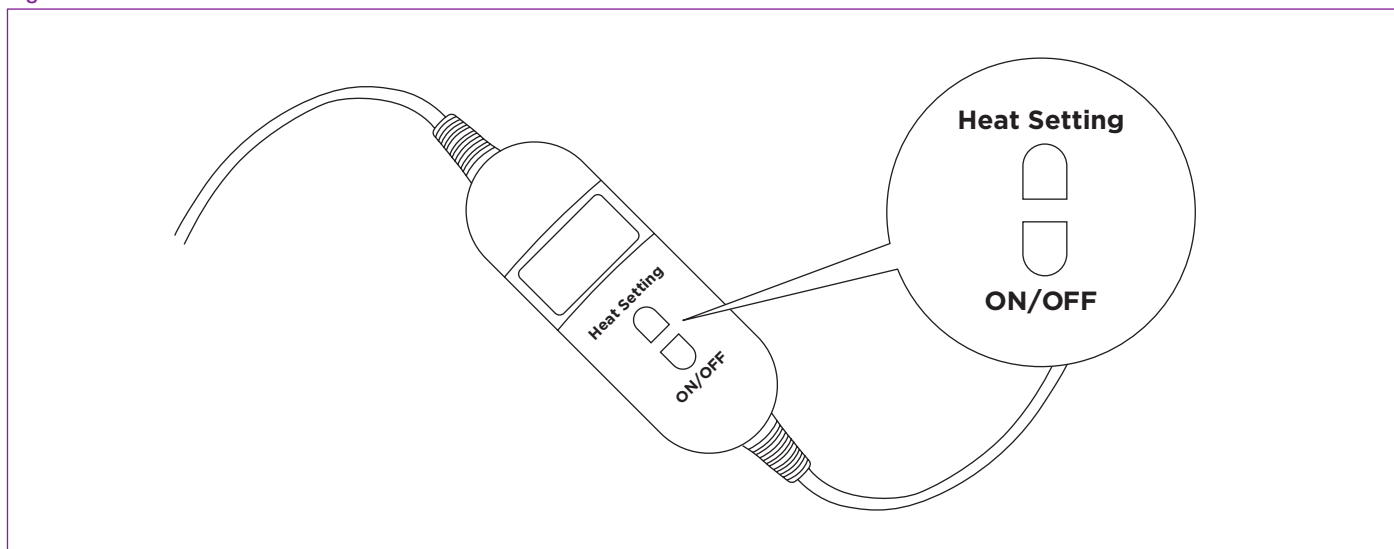

Making sure the warmer is attached securely press the 'On/Off' button and select the heat setting required. Please see 'Operation and Controls' page. 3 section 2 for further details.

### **IMPORTANT:**


Regularly check the surface heat of your pole to ensure the surface does not get too hot.

Once satisfied the pole is at the correct temperature, turn 'OFF' the pole warmer, remove the warmer from the pole and allow it to cool down (this can take around 5 minutes). Take care to fold it without tight creases when it has fully cooled down (tight creases can damage the internal element) and place it in the bag supplied.

## Operation & Control


The first few times the X-Pole warmer is used it may give off a slight odour. This is due to the insulating material heating up for the first time. This is harmless and will quickly subside.

 Fig. (3.1)

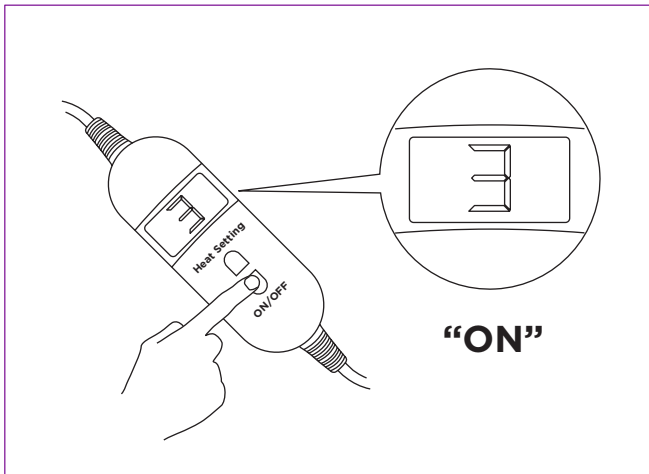

**ON/OFF Button:** Press once to turn "ON" and once more for "OFF". When you turn "ON", the display will show heat setting "3"

 Fig. (3.2)

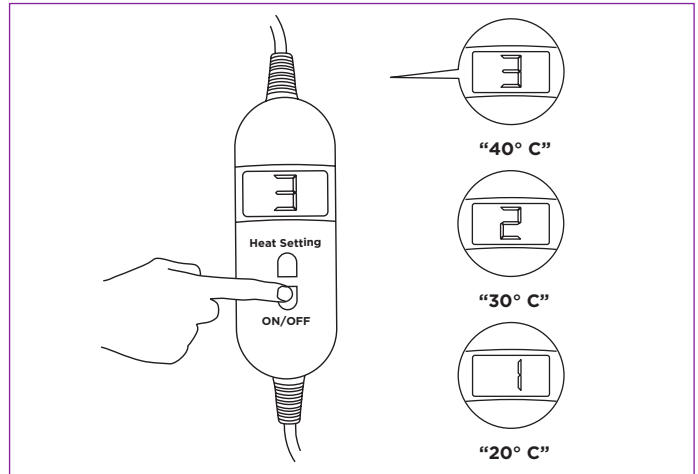

The X-Pole Warmer has 3 heat settings.

**Setting 1: 20° C | Setting 2: 30° C | Setting 3: 40° C**

Pressing the heat setting button changes the heat setting every time it is pressed.

When turned 'ON' the heating setting will automatically be on heat setting 3. Press the heat setting button once and setting 2 will be selected. Press again and setting 1 will be selected and again 3 will be selected.

## Cleaning & Storing Guidelines

**Before cleaning, ensure the X-Pole warmer is unplugged and not connected to any power source.**

**DO NOT dry-clean or iron this warmer. DO NOT machine wash or machine dry.**

**Wrapping the cord around the controls may damage the cord. Loop loosely when storing.**

### Spot Cleaning

Sponge the affected area using a luke-warm neutral detergent or a mild soapy solution. Follow this with a sponging using a clean water solution. Remove any excess water by compressing the wet area between absorbent paper and similar towels and allow to dry.

**DO NOT ALLOW THE CONTROLLER TO COME IN CONTACT WITH ANY WET SOLUTION.**

### Drying

Hang over a washing line or chair - **DO NOT use pegs to secure the pad in position.**

**DO NOT dry with a hair dryer or heater.**

### Storing

When storing, fold neatly but not tightly (or rolled) and without sharp bends in the heating element and place into the bag provided. Do not place heavy objects on top of the pole warmer, especially when folded.

### Product Testing:

The X-Pole Warmer has been manufactured and tested (by TUV International test organisation) to meet CE and UL standards.



# LEADERS IN POLE & AERIAL FITNESS.

## X-POLE UK & EUROPE

Email: [sales@x-pole.co.uk](mailto:sales@x-pole.co.uk)  
Tel: +44 (0) 208 449 4400  
[www.x-pole.co.uk](http://www.x-pole.co.uk)

## X-POLE USA

Email: [info@xpoleus.com](mailto:info@xpoleus.com)  
Tel: +1 888 976 5387  
[www.xpoleus.com](http://www.xpoleus.com)

## X-POLE Australia

Email: [sales@x-pole.com.au](mailto:sales@x-pole.com.au)  
Tel: +61 (0) 2 9589 2645  
[www.x-pole.com.au](http://www.x-pole.com.au)



## X-POLE Korea

Email: [xpolekorea@hanmail.net](mailto:xpolekorea@hanmail.net)  
Tel: +82 (0) 32 277 5882  
[www.xpolekorea.kr](http://www.xpolekorea.kr)

## X-POLE Asia

Email: [sales@x-pole.asia](mailto:sales@x-pole.asia)  
Tel: +86 (21) 6236 6090  
[www.xpolecn.com](http://www.xpolecn.com)

## X-POLE New Zealand

Email: [sales@x-pole.co.nz](mailto:sales@x-pole.co.nz)  
Tel: +64 (0) 9 528 0998  
[www.x-pole.co.nz](http://www.x-pole.co.nz)



## Warning

The WEEE marking on this product (see left) or its documentation indicates that the product must not be disposed of together with household waste. To prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or local authority responsible for waste disposal in your area.

## Customer Support:

Email: [sales@x-pole.co.uk](mailto:sales@x-pole.co.uk)

Tel: +44 (0) 208 449 4400

### Address:

Level 3 Cranbourne House  
(Off Summit Road)  
Cranborne Industrial Estate  
Potters Bar  
Hertfordshire  
United Kingdom  
EN6 3JN  
[www.x-pole.co.uk](http://www.x-pole.co.uk)

## Model:

X-PW01-UK

X-PW01-EUR

220 - 240V - 50Hz 26W (max60W)

## Size:

LxW (150x20cm)

Use with 030 controller only

**Made in P.R. China**